



Flat side of **BEARING COLLAR 5** (#15) should face **STEP PLATE** (#4), with the stepped side facing out toward the **SHIFT PEDAL** bearings.

1. (L) HEEL GUARD [HG-6L]
2. (L) BOLT COVER [H-GROM16BCR-L]
4. (L) STEP PLATE [H-GROM16SP-L]
6. SHIFT PEDAL [SPD-14]
7. SHIFT ROD 80(BK) [SRD-80B]
11. FOOT PEG [PEG]
12. FOOT PEG END CAP [ST-002]
13. PEDAL TIP (DELRIN) [ST-001D / ST-001D18]
15. BEARING COLLAR 5 (BK) [PEBGCLR-5]
17. ROD END COLLAR 35 (BK) [RDED-CLR35]
18. BASE PLATE COLLAR 10 (BK) [BPCLR-10]
21. COLLAR 15-12 (BK) [CLR-15-12]
23. SOCKET HEAD M5×10mm [SBT-M510]
26. SOCKET HEAD M6×60mm [SBT-M660]
27. SOCKET HEAD M8×25mm [SBT-M825]
29. SOCKET HEAD M8×35mm [SBT-M835]
30. BUTTON HEAD M6×10mm [BBT-M610] x 2
32. LOW SOCKET HEAD M6×20mm [LSBT-M620]
34. BUTTON HEAD M8×30mm [BBT-M830]
36. HEX HEAD M6×18mm [HBT-M618]
41. JAM NUT M6 [JNT-6]
42. REVERSE JAM NUT M6 [JNT-6L]
43. LOCK NUT M6 [LNT-6]
44. MALE ROD END M6 [RDED-M6]
45. REVERSE MALE ROD END M6 [RDED-M6L]
- 47. CHANGE ARM (STOCK HONDA PART)**
- 48. WASHER (STOCK HONDA PART)**