



[L]

1. (L) HEEL GUARD [HG-6L]
2. (L) BOLT COVER [H-GROM16BCR-L]
3. (R) BOLT COVER [H-GROM16BCR-R]
4. (L) STEP PLATE [H-GROM16SP-L]
5. (R) STEP PLATE [H-GROM16SP-R]
6. SHIFT PEDAL [SPD-SCP90]
7. SHIFT ROD 90(BK) [SRD-90B]
8. BRAKE PEDAL [BPD-135b]
9. MASTER BASE [H-GROM16MB]
10. CANISTER BRACKET (BK)
11. FOOT PEG [PEG] x 2
12. FOOT PEG END CAP [ST-002] x 2
13. PEDAL TIP (DELRIN) [ST-001D] x 2
14. ROD ADAPTER M6-8 [BRD-ADPTRM6-8]
15. BEARING COLLAR 5 (BK) [PEGBGCLR-5]
16. ROD END COLLAR 19(BK) [RDED-CLR19]
17. ROD END COLLAR 35 (BK) [RDED-CLR35]
18. BASE PLATE COLLAR 10 (BK) [BPCLR-10]
19. BASE PLATE COLLAR 12 (BK) [BPCLR-12]
20. COLLAR 13-10 (BK) [CLR-13-10]
21. COLLAR 15-12 (BK) [CLR-15-12]
22. COLLAR 37-12 (BK) [CLR-37-12]
23. SOCKET HEAD M5x10mm [SBT-M510] x 2
24. SOCKET HEAD M5x40mm [SBT-M540]
25. SOCKET HEAD M6x45mm [SBT-M645]
26. SOCKET HEAD M6x60mm [SBT-M660]
27. SOCKET HEAD M8x25mm [SBT-M825] x 2
28. SOCKET HEAD M8x30mm [SBT-M830]
29. SOCKET HEAD M8x35mm [SBT-M835] x 2
30. BUTTON HEAD M6x10mm [BBT-M610] x 2
31. BUTTON HEAD M6x15mm [BBT-M615] x 2
32. BUTTON HEAD M6x20mm [BBT-M620] x 2
33. BUTTON HEAD M6x30mm [BBT-M630] x 2
34. BUTTON HEAD M8x30mm [BBT-M830] x 2
35. HEX HEAD M5x6mm [HBT-M56]
36. HEX HEAD M6x18mm [HBT-M618]
37. WASHER M8 [WS-8]
38. WASHER M12 [WS-12]
39. PLAIN NUT M5 [NUT-5]
40. PLAIN NUT M6 [NUT-6] x 2
41. JAM NUT M6 [JNT-6] x 2
42. REVERSE JAM NUT M6 [JNT-6L]
43. LOCK NUT M6 [LNT-6] x 2
44. MALE ROD END M6 [RDED-M6] x 2
45. REVERSE MALE ROD END M6 [RDED-M6L]
46. PULL SWITCH STAY 14 [PSTAY-14]
47. CHANGE ARM (STOCK HONDA PART)
48. WASHER (STOCK HONDA PART) x 2

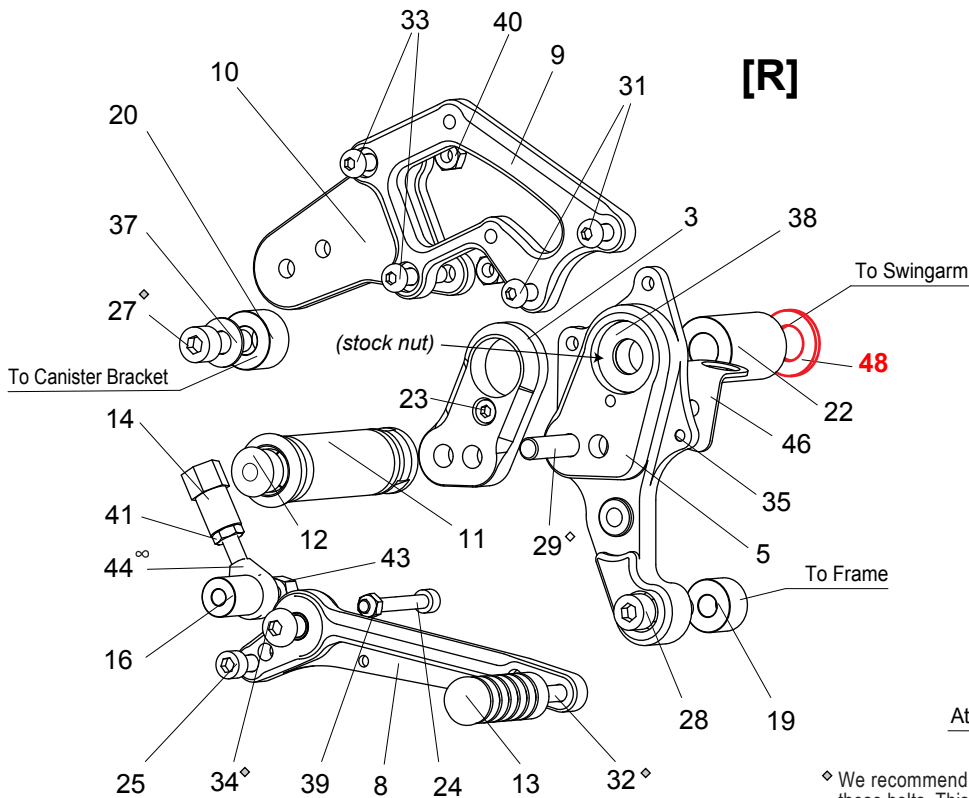

[R]

(BACK SIDE)

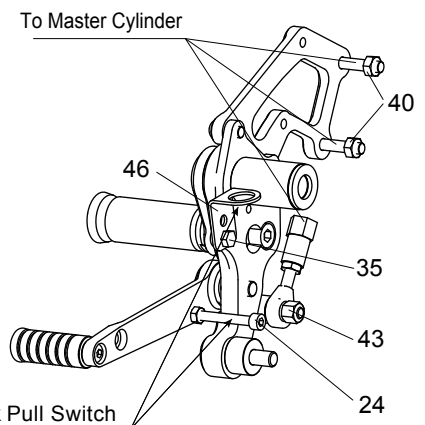

◇ We recommend applying some threadlocker (such as Loctite or Vibra Tite) to these bolts. This should help prevent the parts from vibrating loose during a ride. (Some pre-assembled parts have already been Loctited)

∞ Lubricate rod ends regularly