



[L]

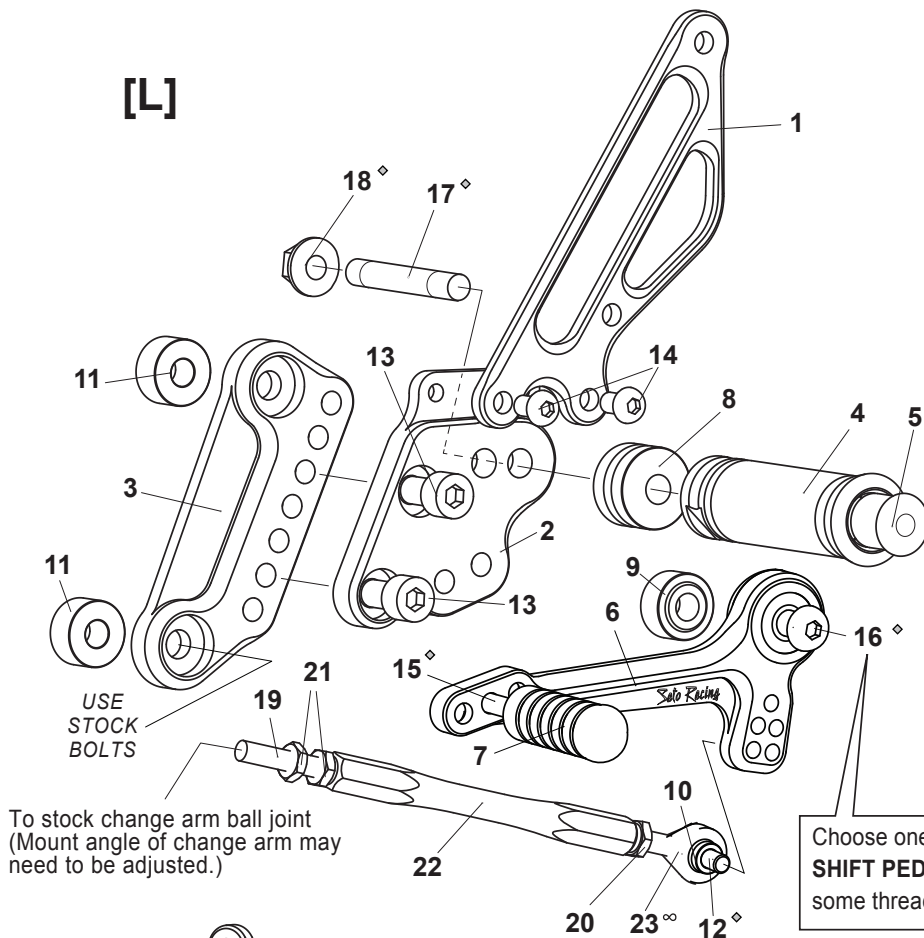

[L]-SIDE

1. [L] HEEL GUARD [HG-17L]
2. [L] STEP PLATE [H-CB13SP-L]
3. [L] BASE PLATE (BK) [H-CB13BP-L]
4. FOOT PEG [PEG]
5. FOOT PEG END CAP [ST-002]
6. SHIFT PEDAL [SPD-0912]
7. PEDAL TIP (DELFIN) [ST-001D18]
8. PEG COLLAR 15 [PEGCLR-15]
9. BEARING COLLAR 10 [PEGBGCLR-10]
10. ROD END COLLAR 3(GD) [RDED-CLR3]
11. BASE PLATE COLLAR 10(BK) [BPCLR-10]
12. SOCKET HEAD M6x20mm [SBT-M620]
13. SOCKET HEAD M8x15mm [SBT-M815] x 2
14. BUTTON HEAD M6x10mm [BBT-M610] x 2
15. BUTTON HEAD M6x20mm [BBT-M620]
16. BUTTON HEAD M8x35mm [BBT-M835]
17. STUD BOLT M8x45mm [STBT-45]
18. FLANGE NUT M8 [FNT-8]
19. REVERSE STUD M6x45mm [STUD-M6L]
20. JAM NUT M6 [JNT-6]
21. REVERSE JAM NUT M6 [JNT-6L]
22. SHIFT ROD 110 [SRD-110]
23. MALE ROD END M6 [RDED-M6]

[R]

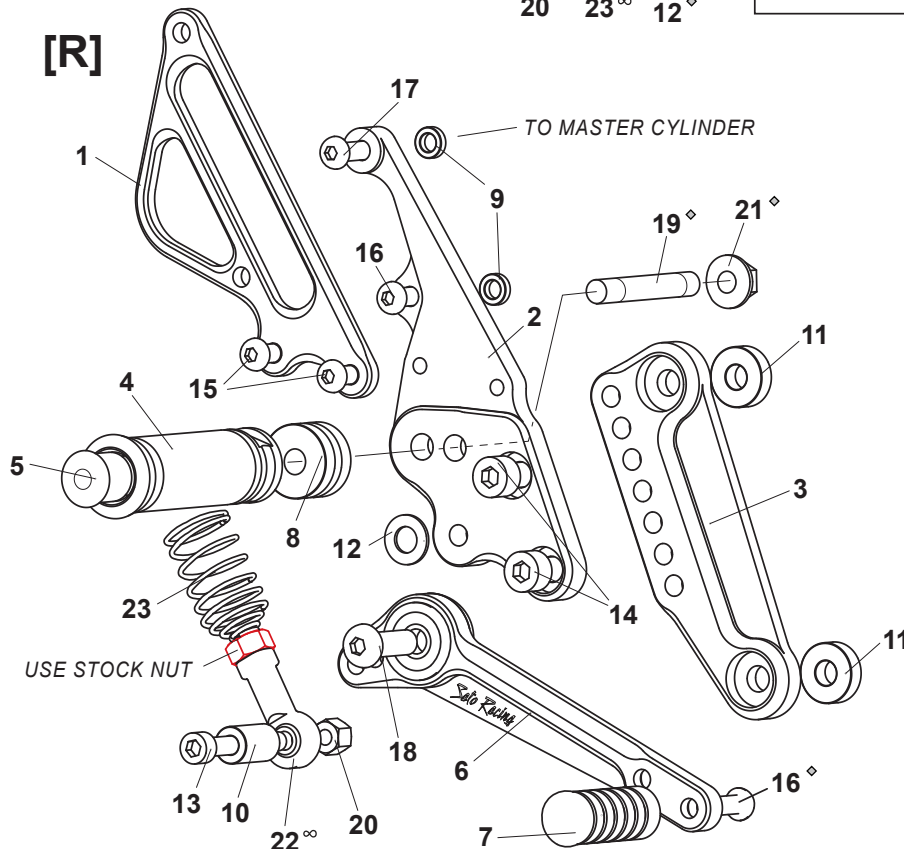

[R]-SIDE

1. [R] HEEL GUARD [HG-10R]
2. [R] STEP PLATE [H-CB13SP-R]
3. [R] BASE PLATE (BK) [H-CB13BP-R]
4. FOOT PEG [PEG]
5. FOOT PEG END CAP [ST-002]
6. BRAKE PEDAL [BPD-17]
7. PEDAL TIP (DELFIN) [ST-001D18]
8. PEG COLLAR 15 [PEGCLR-15]
9. COLLAR 3-6(BK) [CLR-3-6b]
10. ROD END COLLAR 20(BK) [RDED-CLR20]
11. BASE PLATE COLLAR 6(BK) [BPCLR-6]
12. PEG WASHER M8 [PWS-8]
13. SOCKET HEAD M6x45mm [SBT-M645]
14. SOCKET HEAD M8x15mm [SBT-M815] x 2
15. BUTTON HEAD M6x10mm [BBT-M610] x 2
16. BUTTON HEAD M6x20mm [BBT-M620]
17. BUTTON HEAD M6x25mm [BBT-M625]
18. BUTTON HEAD M8x25mm [BBT-M825]
19. STUD BOLT M8x45mm [STBT-45]
20. LOCK NUT M6 [LNT-6]
21. FLANGE NUT M8 [FNT-8]
22. FEMALE ROD END 6-M8 [RDED-F6-8]
- BRAKE LIGHT SWITCH P-1.25 [BSW-125]
(Not pictured)

◇ Apply threadlocker (such as Loctite or Vibra Tite) to these bolts before tightening.
(Factory pre-tightened parts have been already Loctited)

∞ Clean and lubricate rod end ball joints periodically.