


Flat side of **BEARING COLLAR 5** (#15) should face the **STEP PLATE** (#3), with the stepped side facing out towards the Shift Pedal bearings.

1. (L) HEEL GUARD [HG-2L]
3. (L) STEP PLATE [K-ZX613SP-L]
5. (L) BASE PLATE [K-ZX613BP-L]
7. SHIFT PEDAL [SPD-0912]
11. FOOT PEG [PEG]
12. FOOT PEG END CAP [ST-002]
13. PEDAL TIP (DELRIN) [ST-001D18]
15. BEARING COLLAR 5 (BK) [PEGBGCLR-5SB]
16. ROD END COLLAR 6 (GD) [RDED-CLR6]
18. PEG COLLAR 12 [PEGCLR-12]
19. REVERSE STUD M6 [STUD-M6L]
22. HEX HEAD M8 x 40mm [HBT-M840]
24. HEX HEAD M6 x 25mm [HBT-M625]
25. BUTTON HEAD M6 x 10mm [BBT-M610] x 2
27. BUTTON HEAD M8 x 30mm [BBT-M830]
28. LOW SOCKET HEAD M6 x 20mm [LSBT-M620]
29. LOW SOCKET HEAD M8 x 15mm [LSBT-M815] x 2
31. REVERSE JAM NUT M6 [JNT-6L] x 2
35. SPLIT WASHER M8 [SWS-8]
37. REVERSE FEMALE ROD END M6 [RDED-F6L]

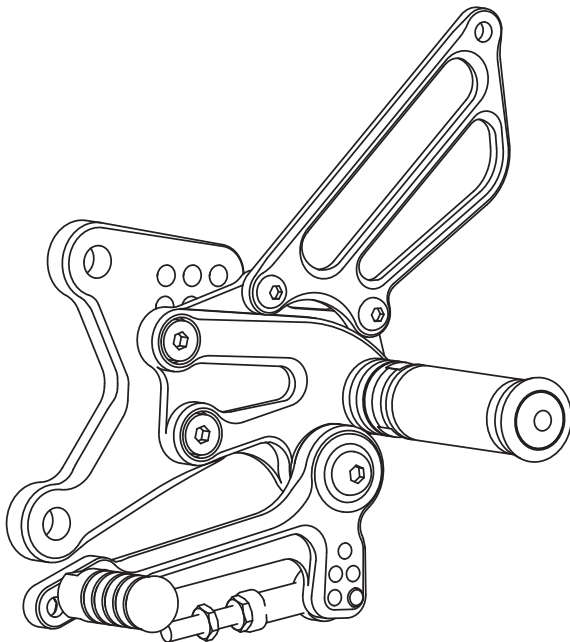

PEG POSITIONS		
1	0mm Back	20mm Up
2	10mm Back	20mm Up
3	10mm Back	30mm Up
4	20mm Back	30mm Up
5	20mm Back	40mm Up
6*	0mm Back	30mm Up
7*	0mm Back	40mm Up
8*	10mm Back	40mm Up

All measurements are in relation to stock foot peg position (0 mm).

* Positions 1-5 are compatible with the stock brake light pull switch. Positions 6-8 requires using a pressure-type brake light switch (part# BSW-125) (sold separately)