


HONDA GROM ('22-) REVERSE SHIFT REAR SETS

part# H-GROM22RSR

[L]-SIDE

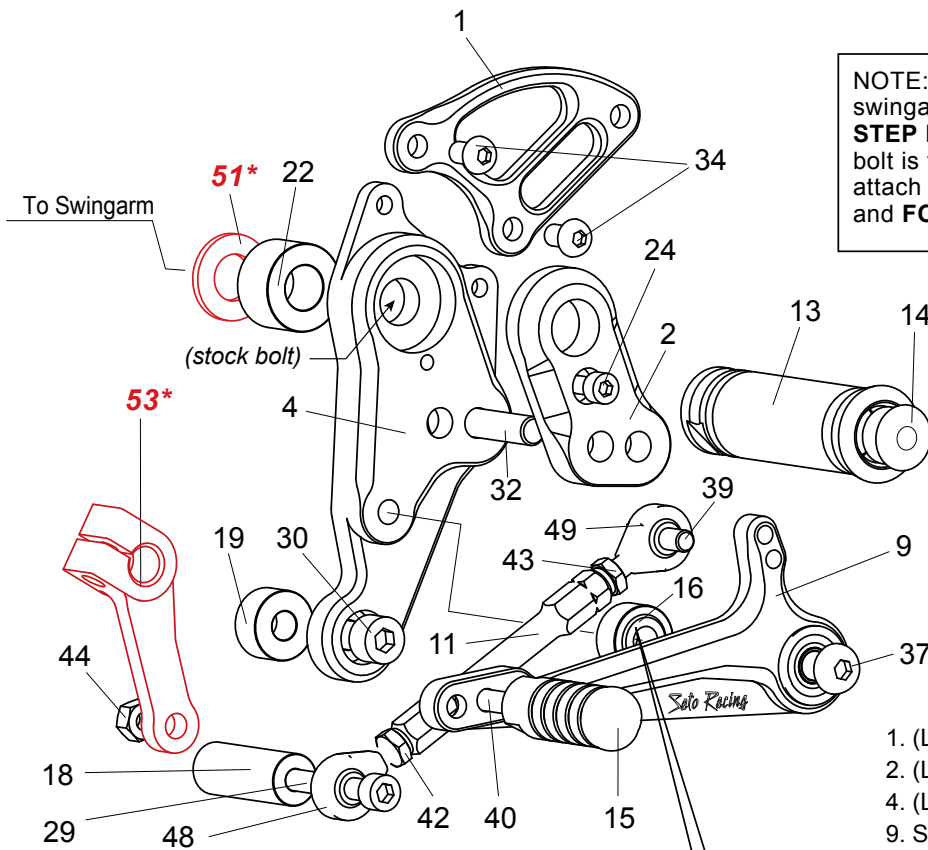

NOTE: Install stock swingarm pivot bolt through **STEP PLATE (#4)**. After bolt is tightened down, then attach **BOLT COVER (#2)** and **FOOT PEG** over it.

Flat side of **BEARING COLLAR 10 (#16)** should face **STEP PLATE (#4)**, with the stepped side facing out toward the **SHIFT PEDAL** bearings.

1. (L) HEEL GUARD [HG-22R]
2. (L) BOLT COVER [H-GROM16BCR-L]
4. (L) STEP PLATE [H-GROM16SP-L]
9. SHIFT PEDAL [SPD-SCP70]
11. SHIFT ROD 80(BK) [SRD-80B]
13. FOOT PEG [PEG]
14. FOOT PEG END CAP [ST-002]
15. PEDAL TIP (DELRIN) [ST-001D18]
16. BEARING COLLAR 10(BK) [PEGBGCLR-10SB]
18. ROD END COLLAR 40(BK) [RDED-CLR40]
19. BASE PLATE COLLAR 10(BK) [BPCLR-10]
22. COLLAR 15-12 (BK) [CLR-15-12]
24. SOCKET HEAD M5x10mm [SBT-M510]
29. SOCKET HEAD M6x65mm [SBT-M665]
30. SOCKET HEAD M8x25mm [SBT-M825]
32. SOCKET HEAD M8x35mm [SBT-M835]
34. BUTTON HEAD M6x10mm [BBT-M610] x 2
37. BUTTON HEAD M8x35mm [BBT-M835]
39. HEX HEAD M6x18mm [HBT-M618]
40. LOW SOCKET HEAD M6x20mm [LSBT-M620]
42. JAM NUT M6 [JNT-6]
43. REVERSE JAM NUT M6 [JNT-6L]
44. LOCK NUT M6 [LNT-6]
48. MALE ROD END M6 [RDED-M6]
49. REVERSE MALE ROD END M6 [RDED-M6L]

*** Stock Honda Parts:**

51. WASHER

53. CHANGE ARM